








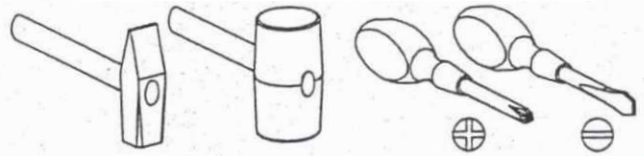

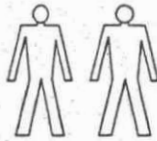

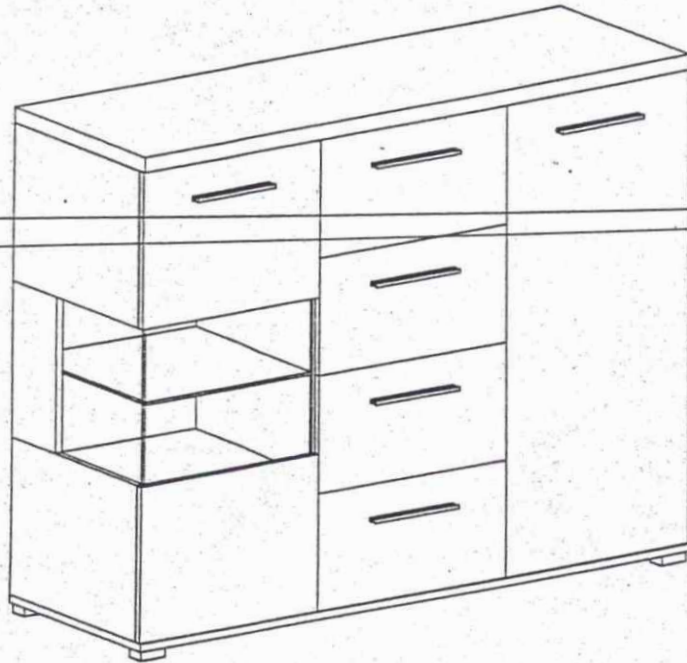











Montážny návod

POTREBNÉ NÁRADIE



BRIT 6 - komoda 135 s LED svetlom



					I				
 4 x 27 mm	N			P		H		J	
 3 x 13 mm	Z		U	 4 x 16 mm	G		M		
 4 x 35 mm	R		E		C		D		L
	A		B		K		Z	 KLEJ	Y

