

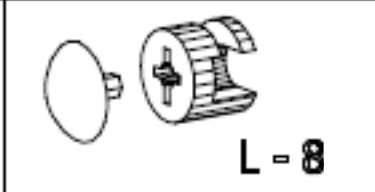
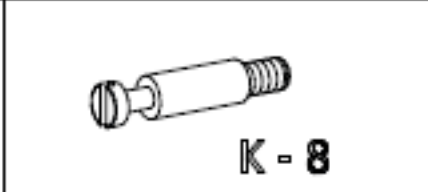
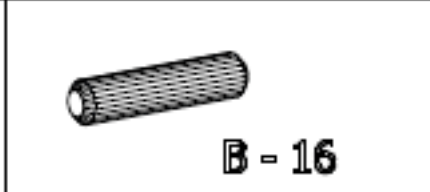
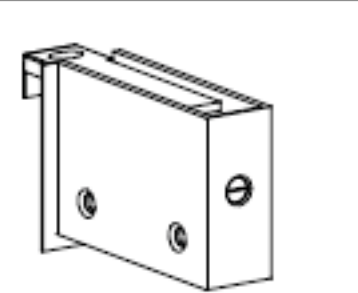
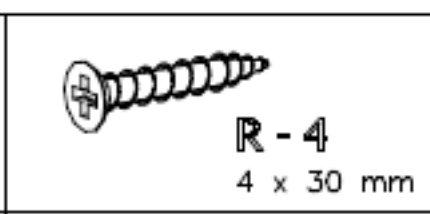
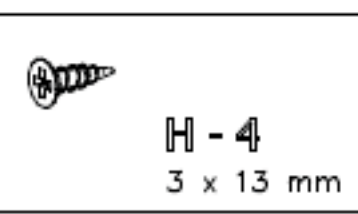
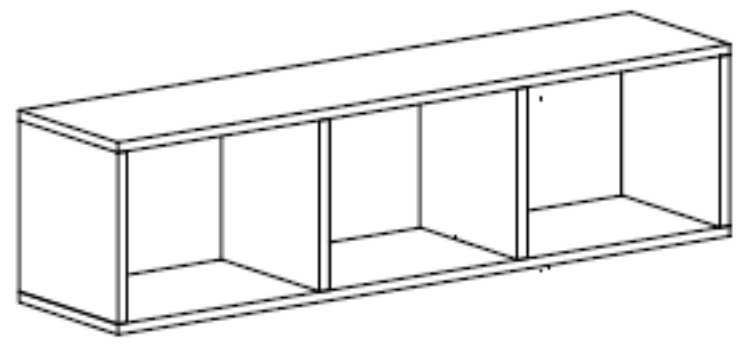
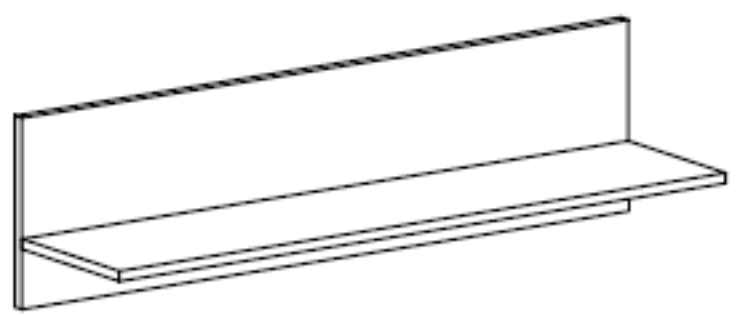


FRANCO


Závesné police

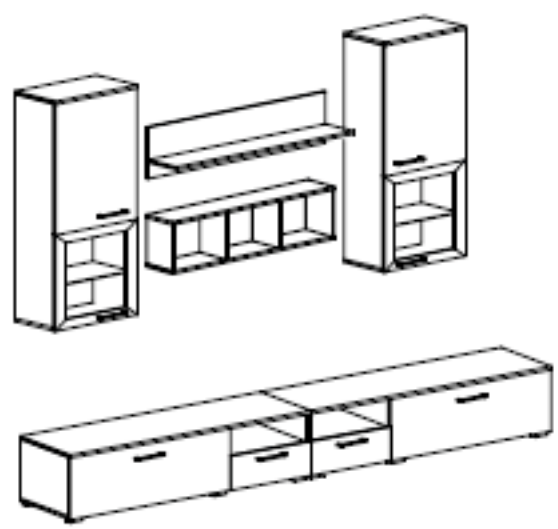


①

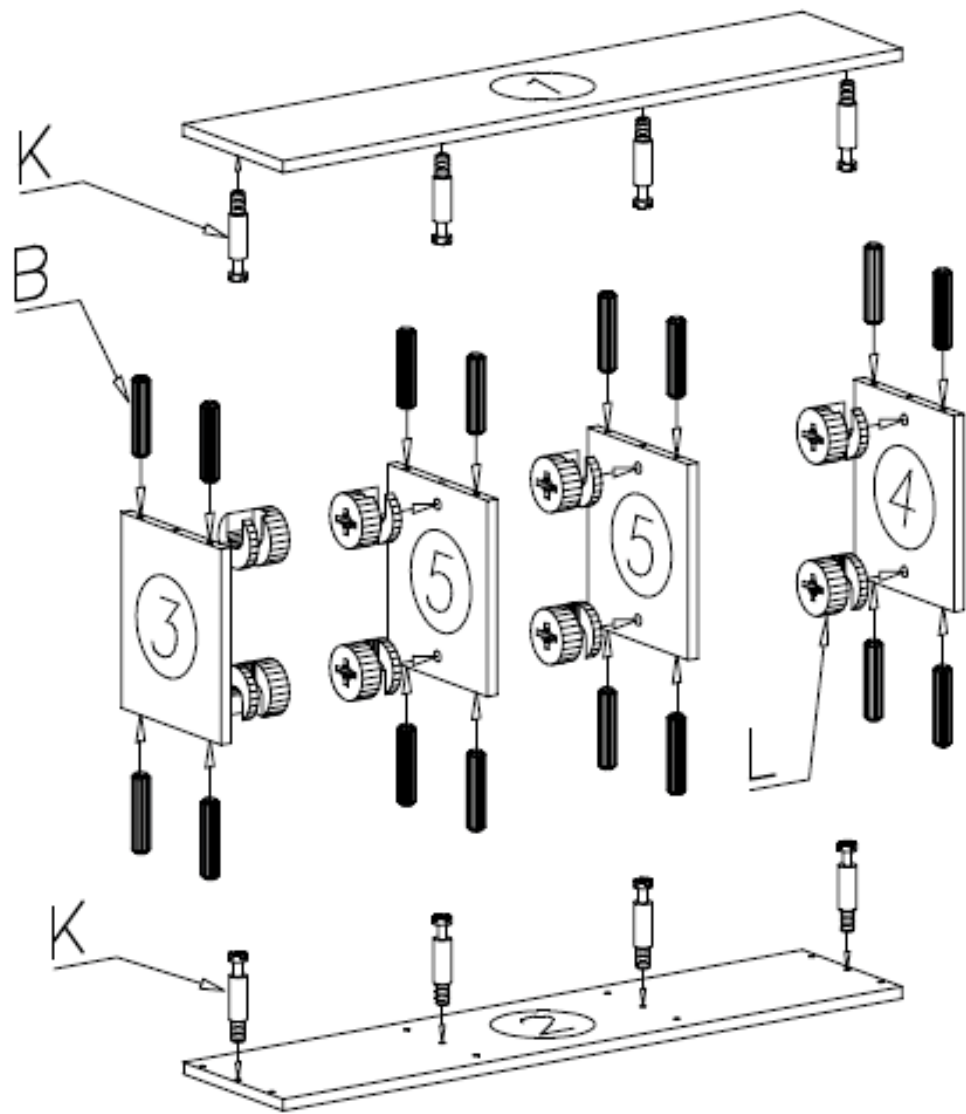


②

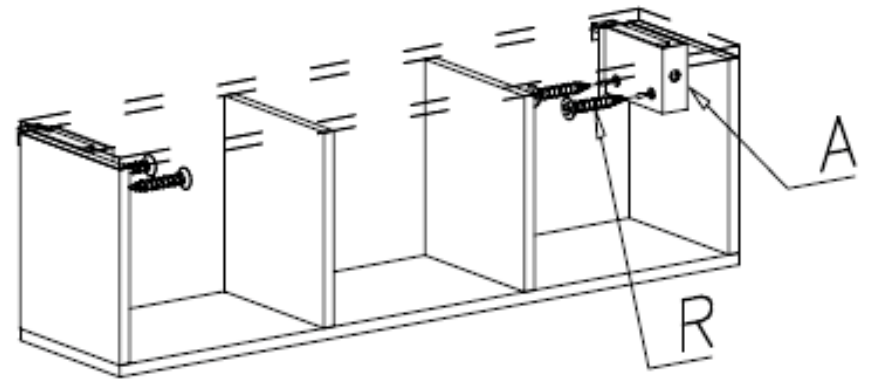

③


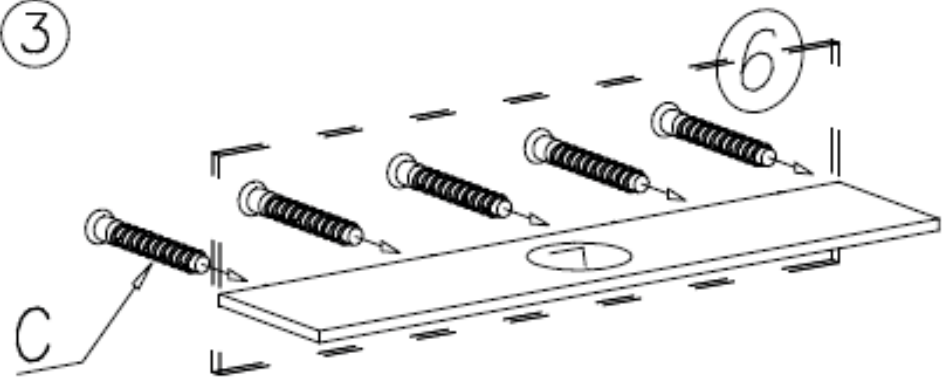


④

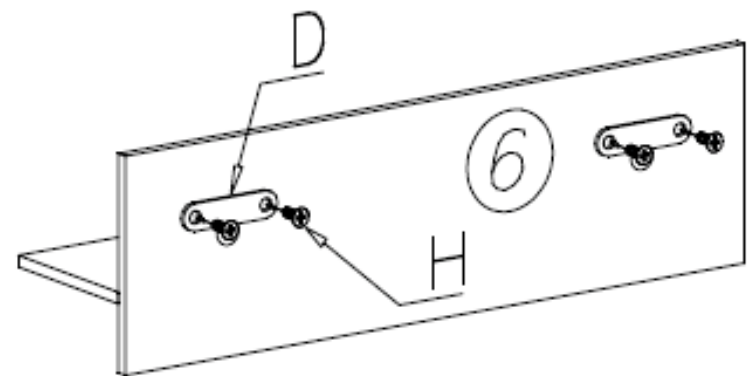



Návod na montáž




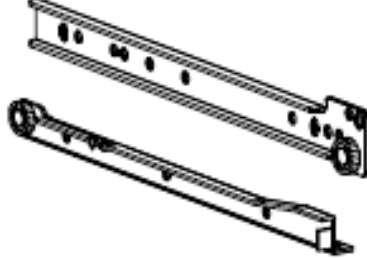




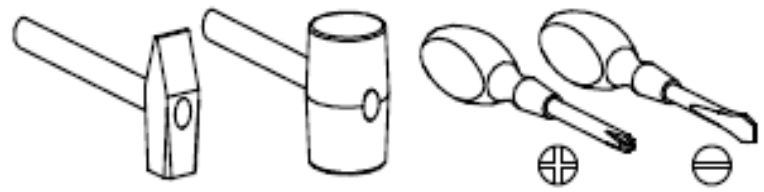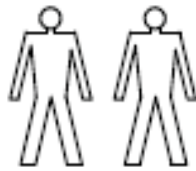


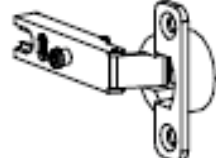




Naradie potrebné k montáži

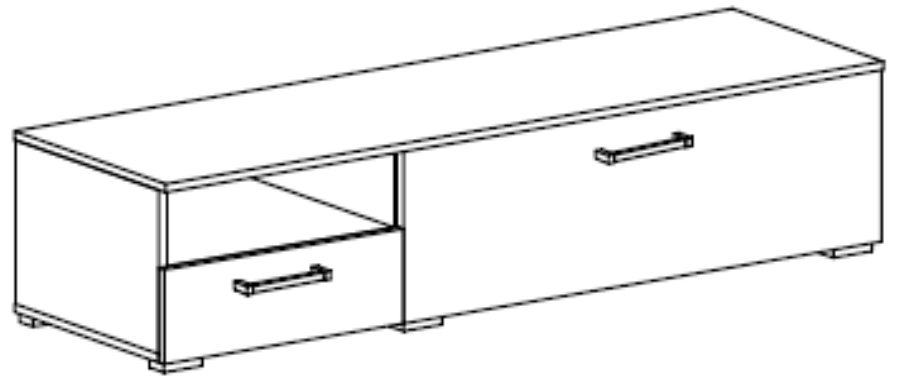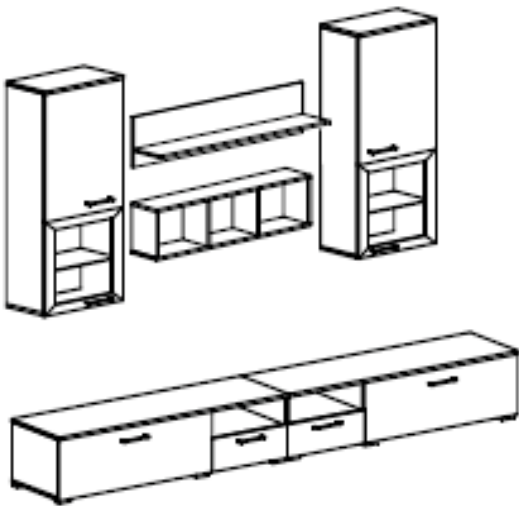


FRANCO

RTV pravý




 <p>S - 1</p>	 <p>J - 4 3 x 25 mm</p>	 <p>H - 7 3 x 13 mm</p>	 <p>P - 1 Kpl.</p>
 <p>A - 5</p>	 <p>N - 4 4 x 27 mm</p>	 <p>U - 2</p>	 <p>G - 8 4 x 16 mm</p>
 <p>Z - 1</p>	 <p>E - 35</p>	 <p>C - 2</p>	 <p>D - 2</p>
 <p>lepidlo</p>			


1

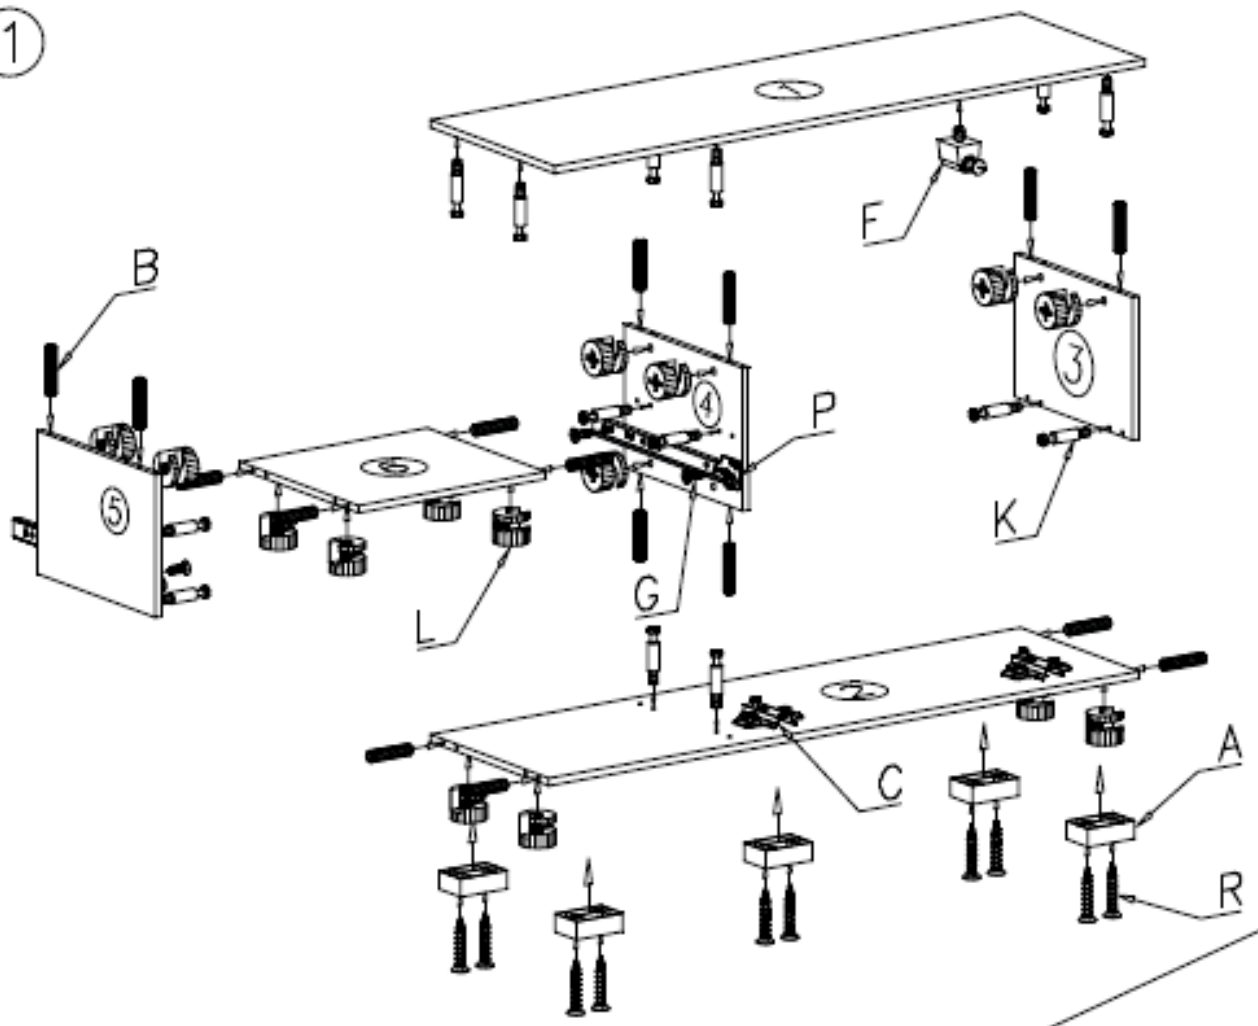


2




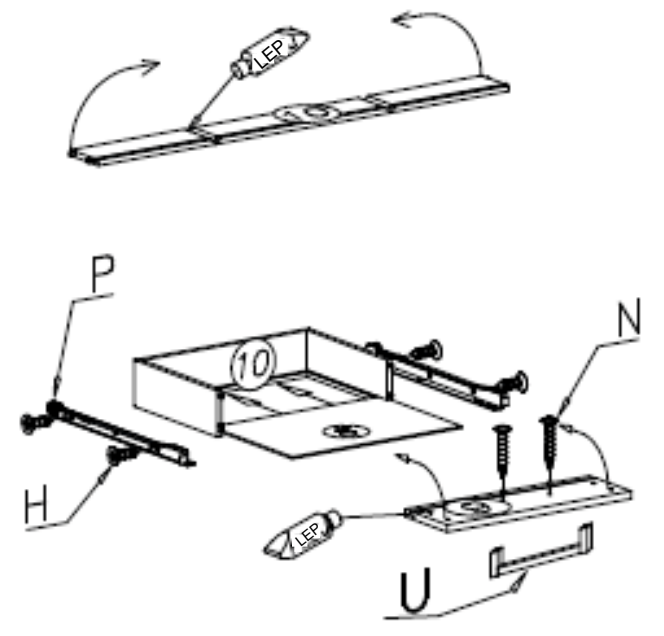


3

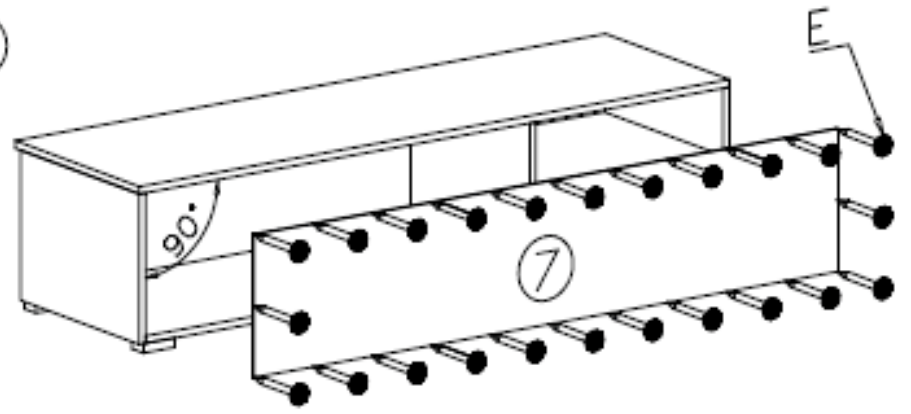


4

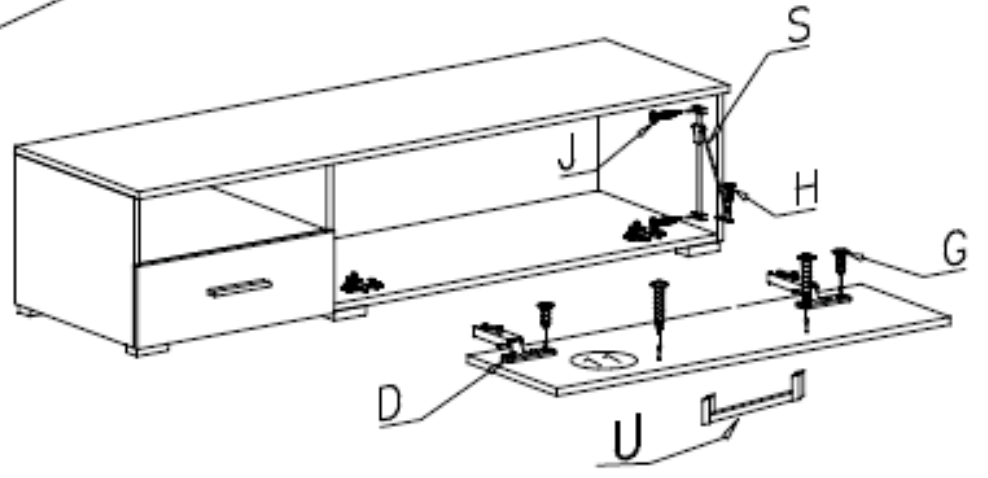

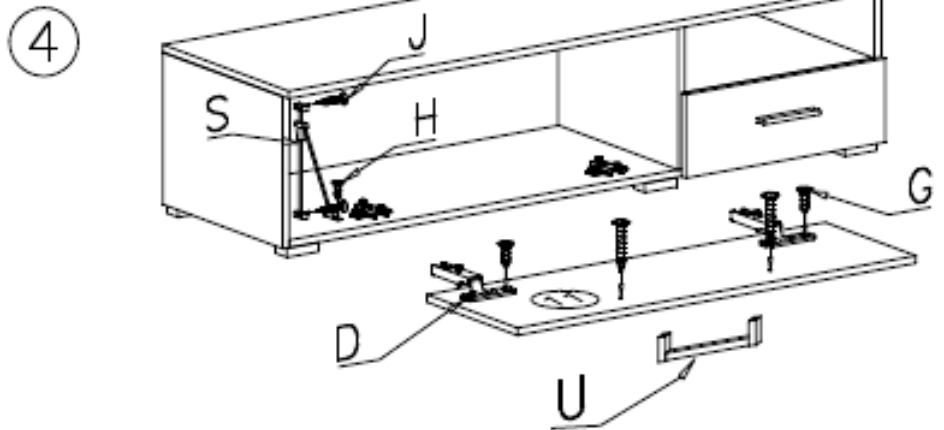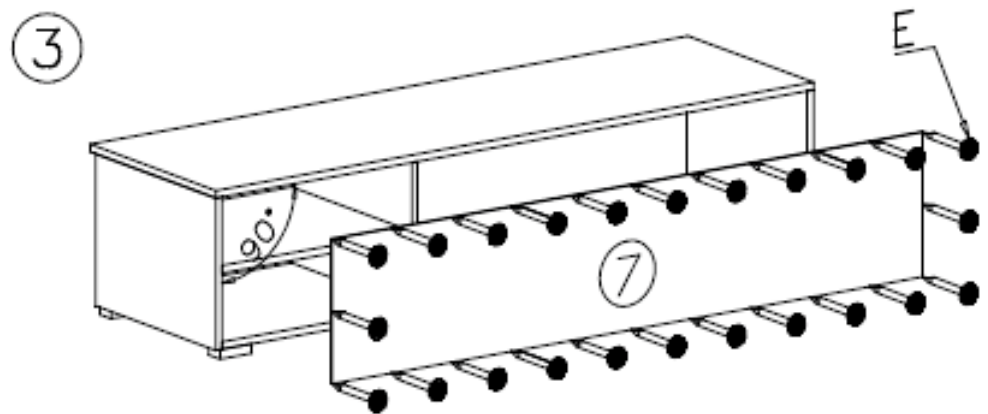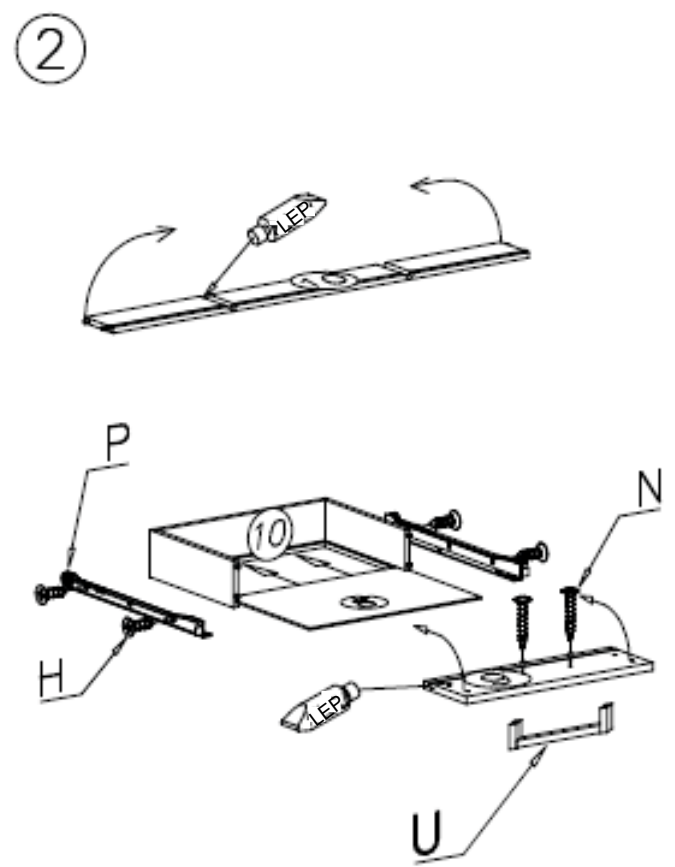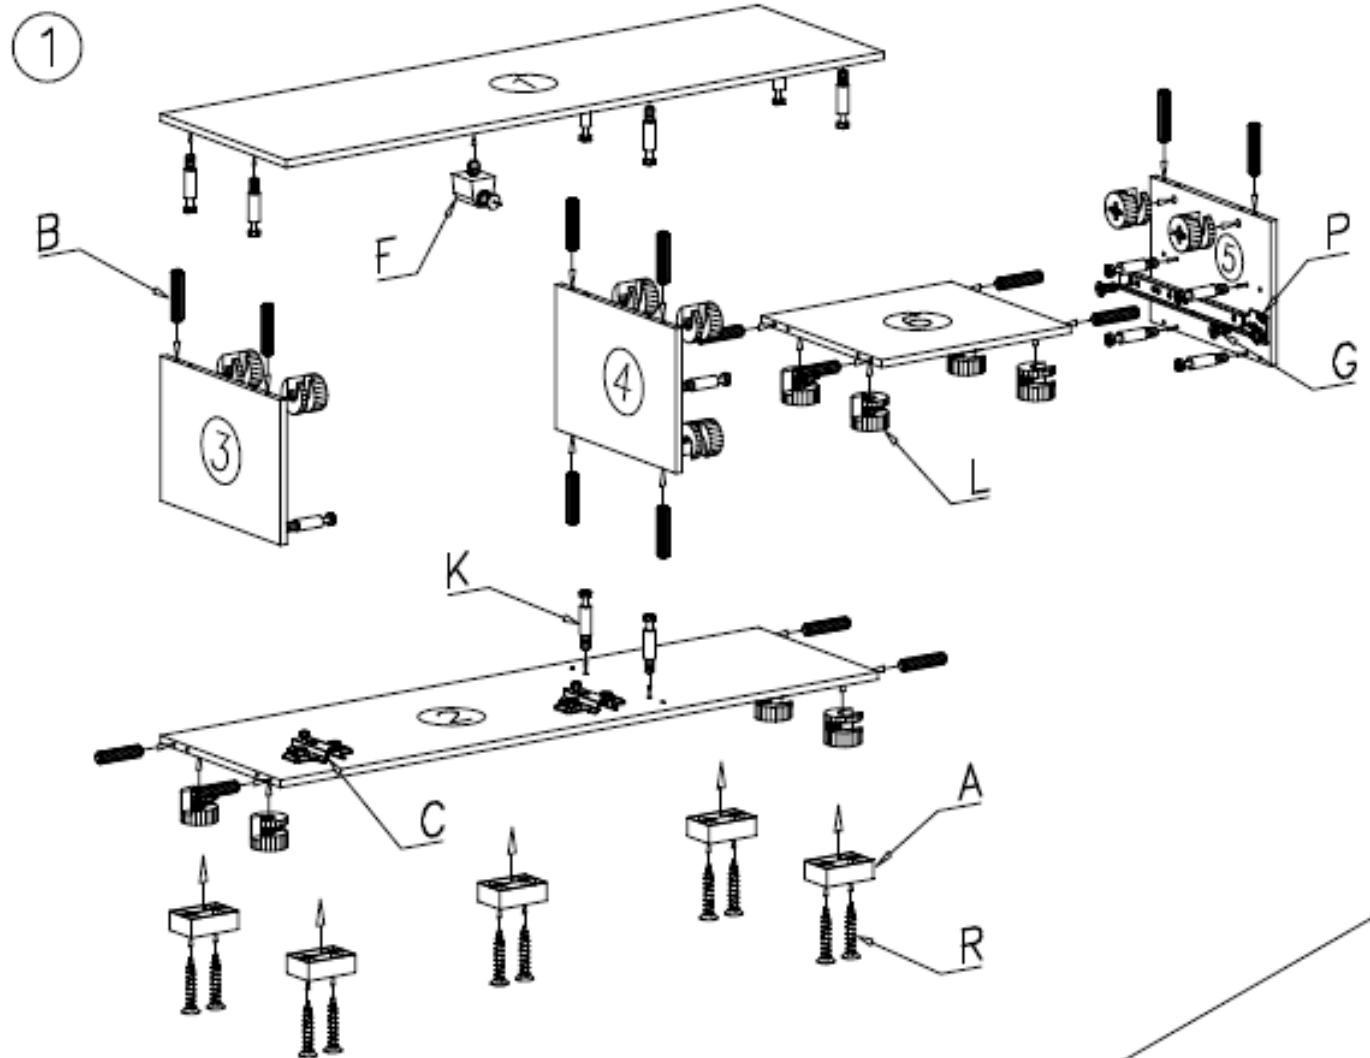




Návod na montáž

Nástroje použité k montáži

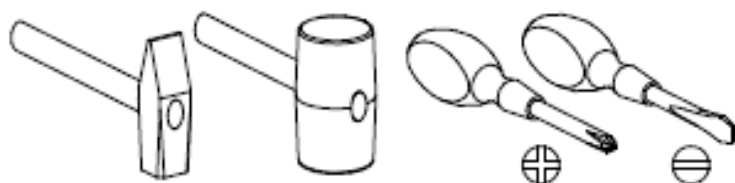

FRANCO


Závesná vitrína l'avá

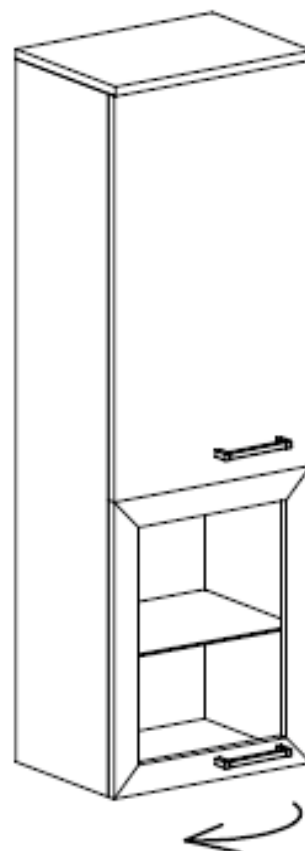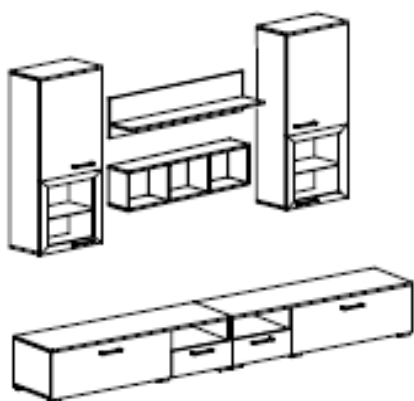


R - 4
4 x 30 mm



G - 8
4 x 16 mm

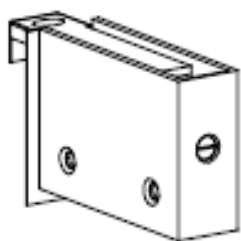

A - 2



N - 4



U - 2




Z - 1



P - 8



C - 4

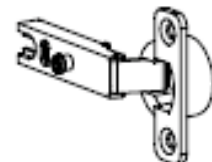


D - 4




W - 1



B - 12




K - 6

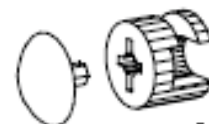


L - 6


①

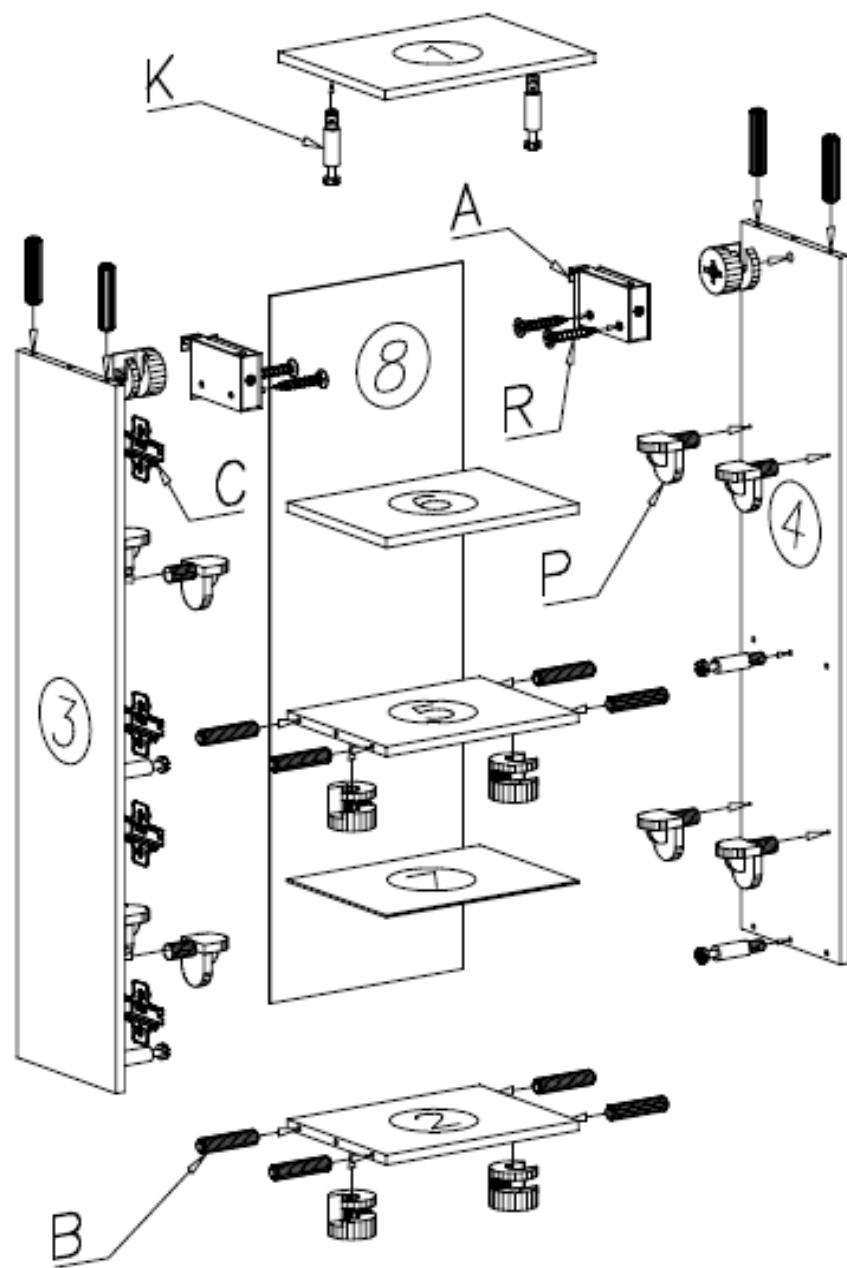

②

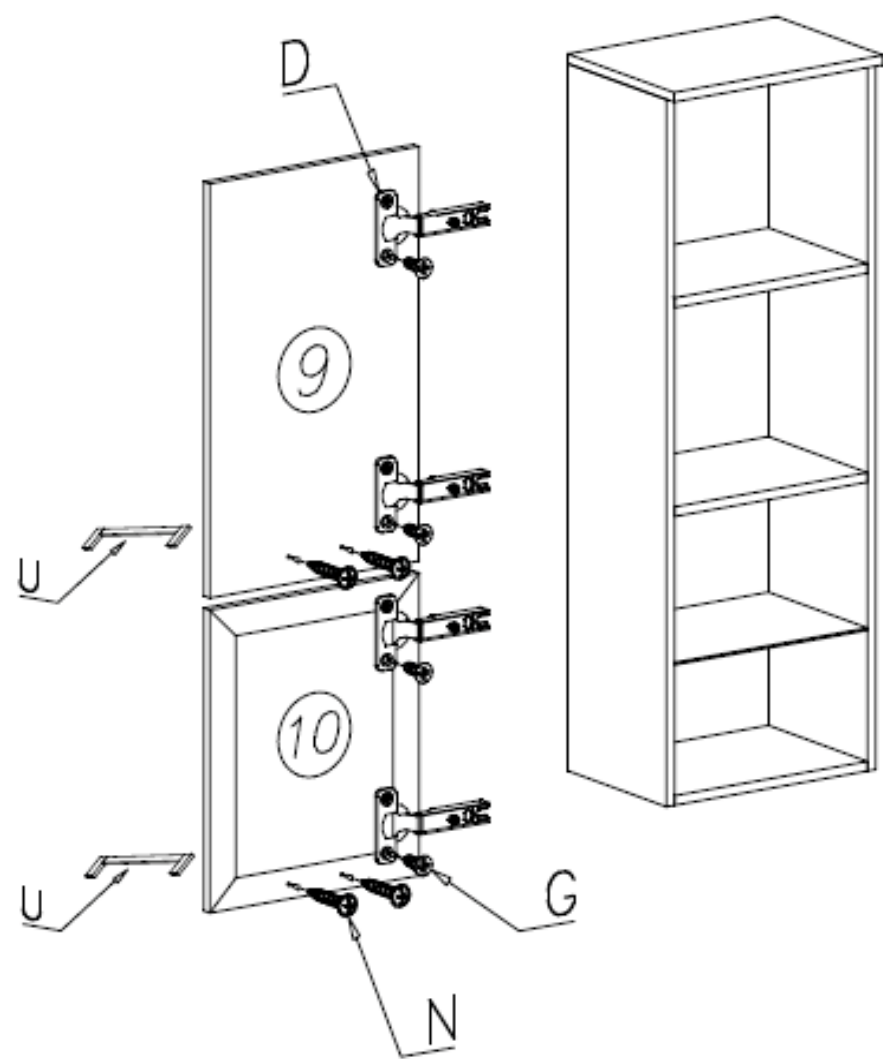

①

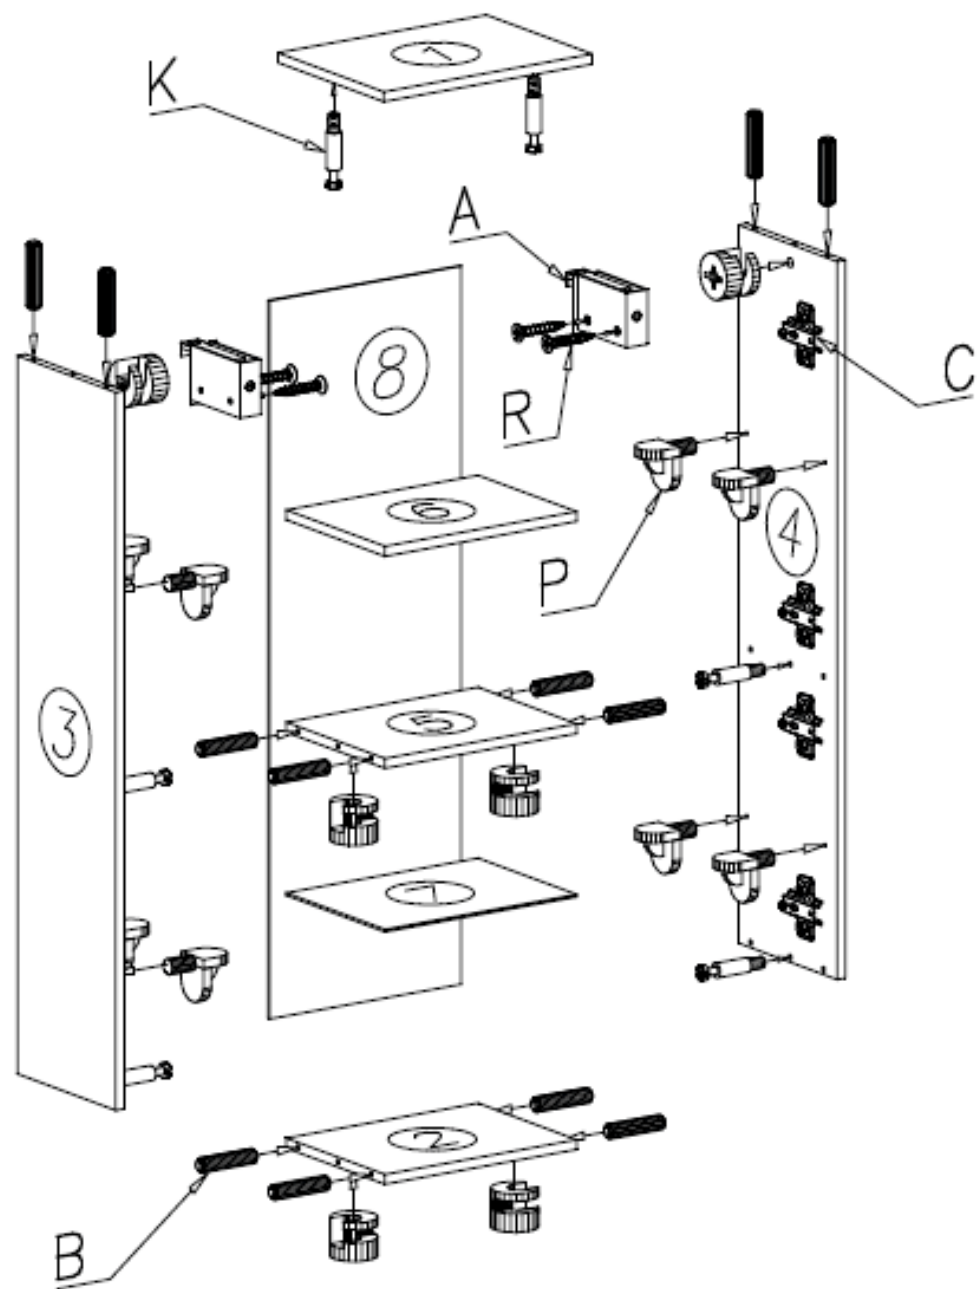

②

