
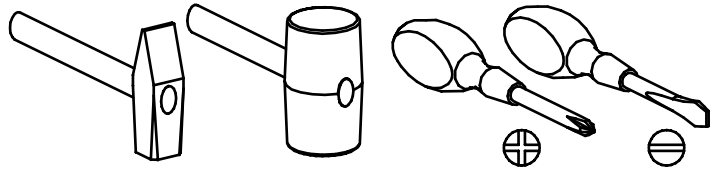



# Návod na montáž

# Náradie potrebné k montáži

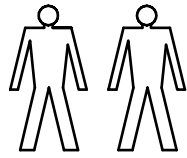


## SKRINA


## TORINO

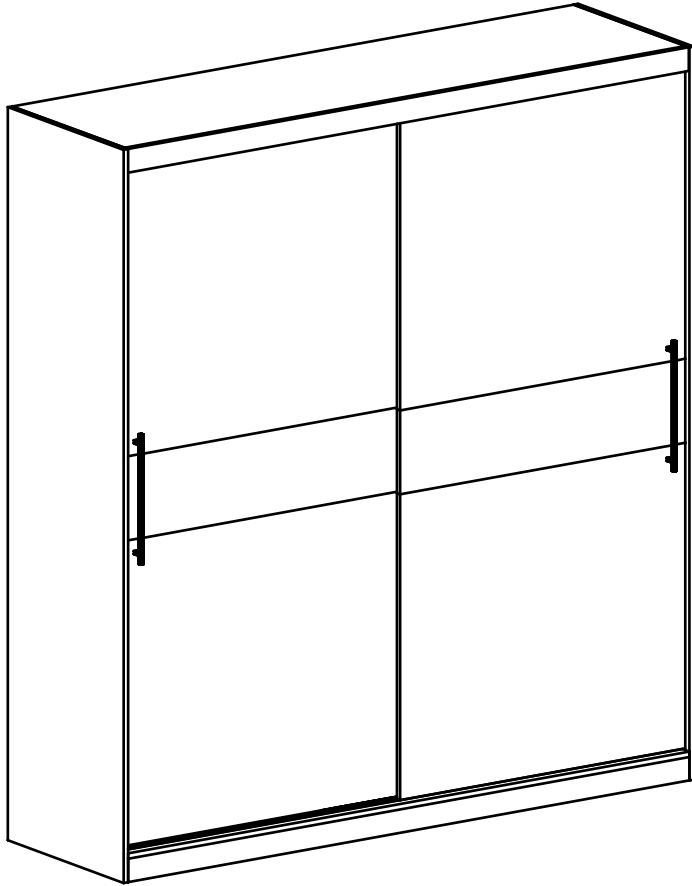

H



D



E




W




3 x 13 mm


S



C




P




4 x 27 mm

N



U



7 x 50 mm

A



T



F




4 x 13 mm

G



6 x 13 mm


M



L



B




K




Z


1

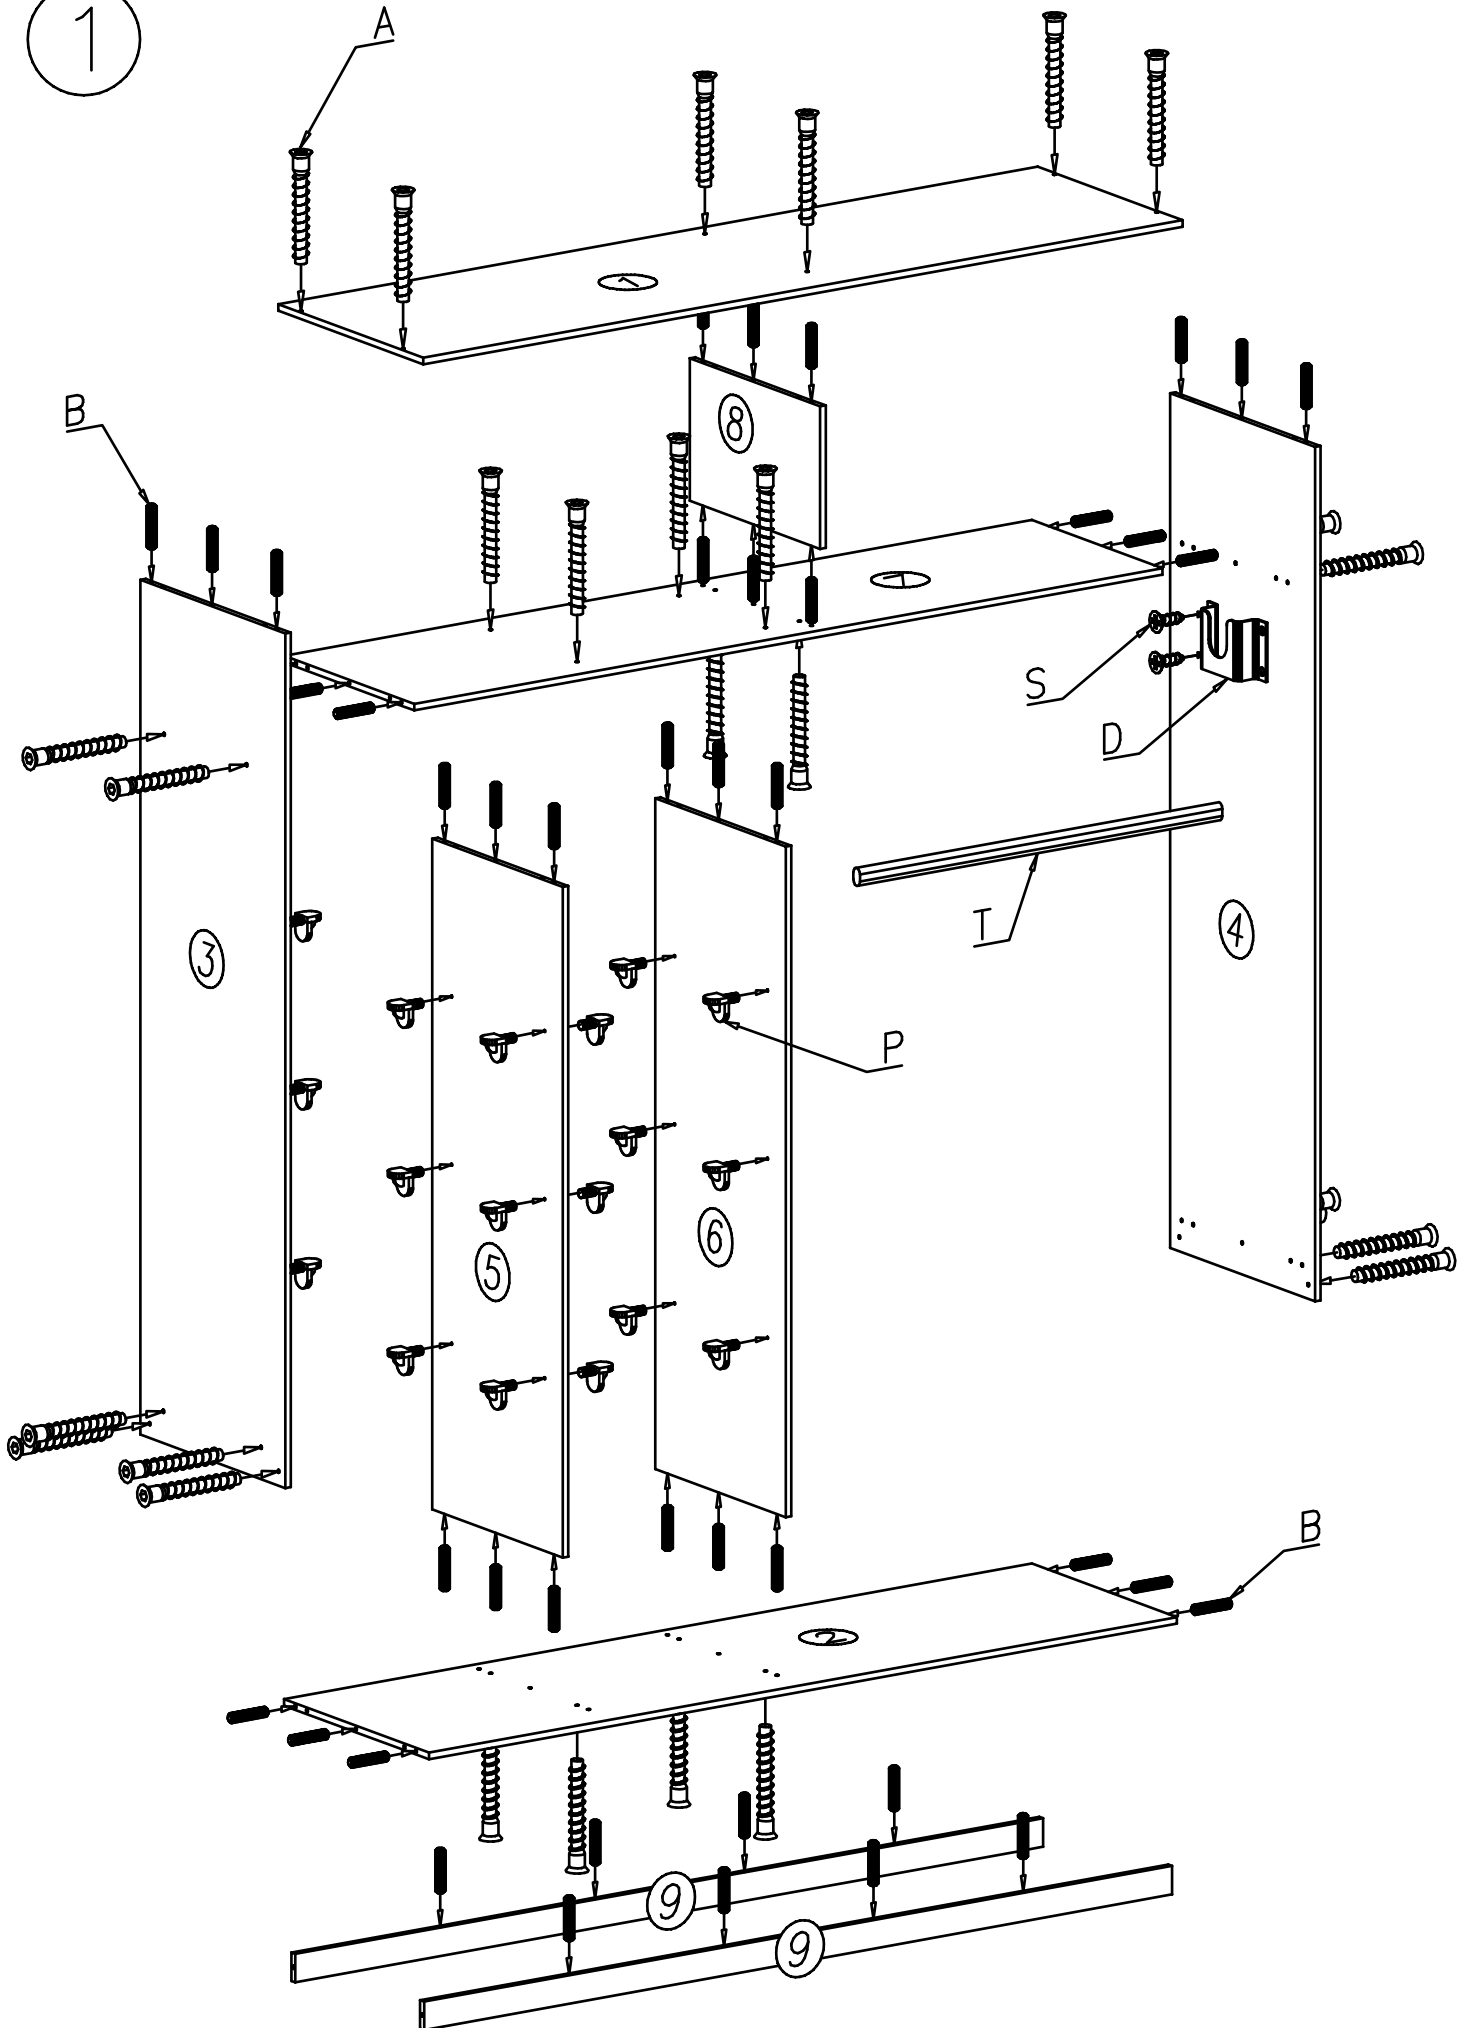




2

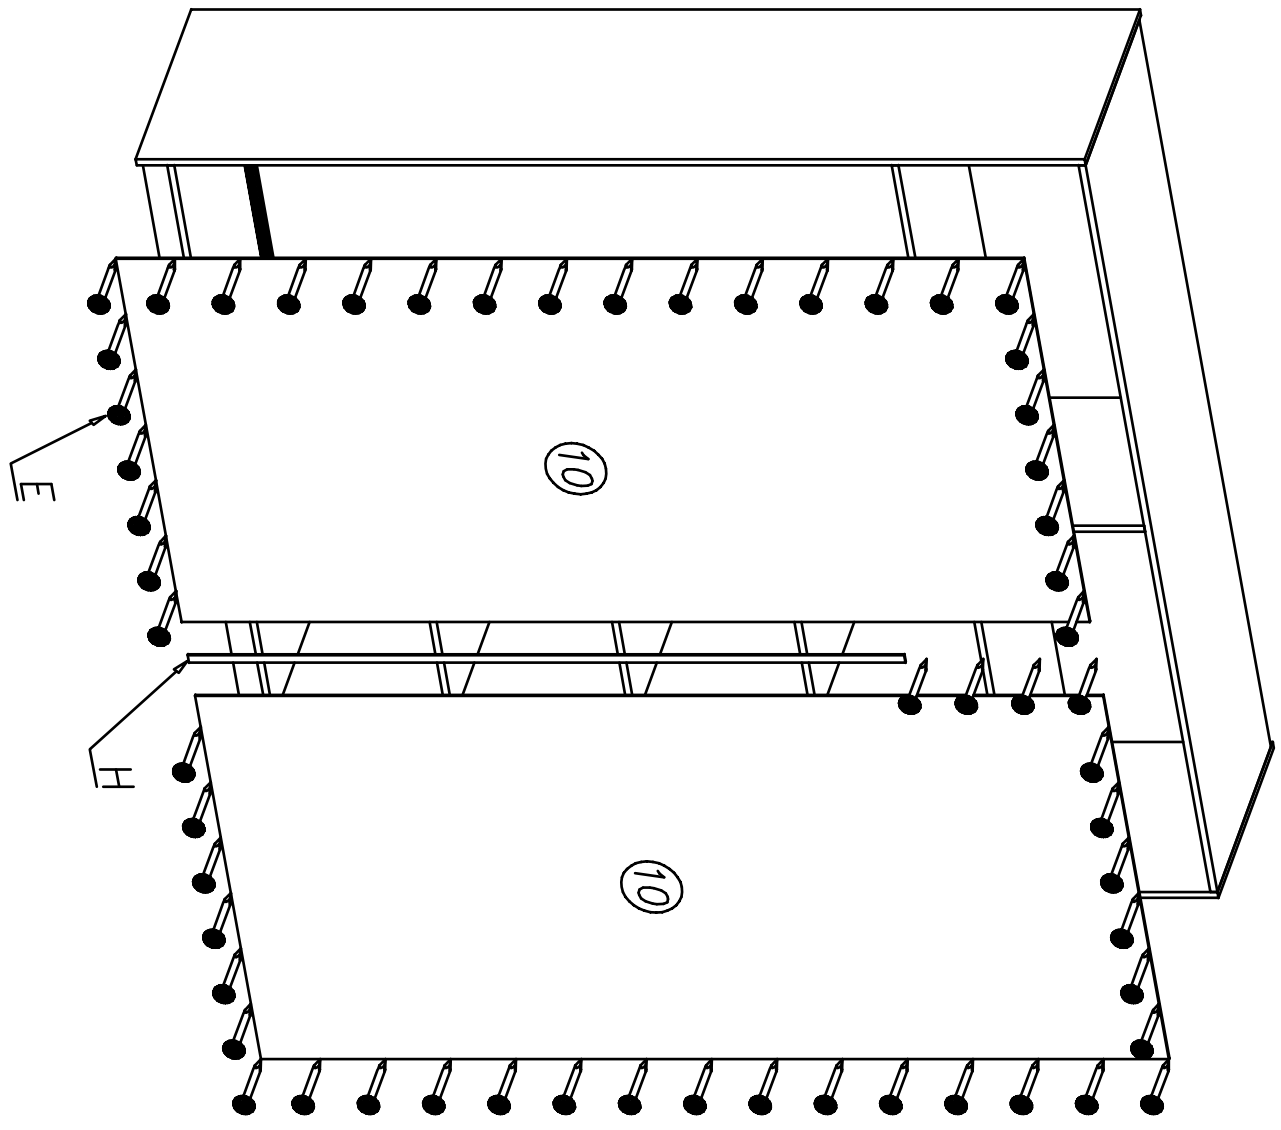

3

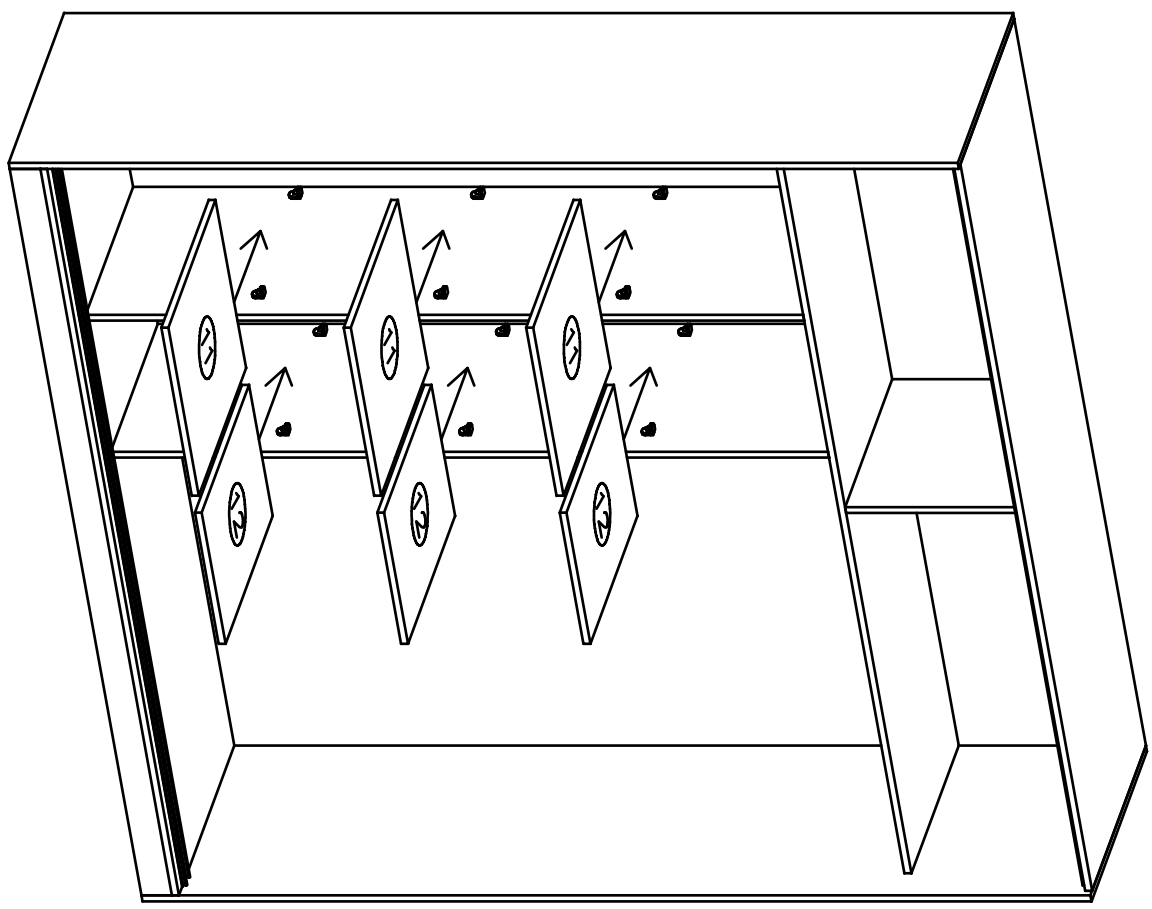

4

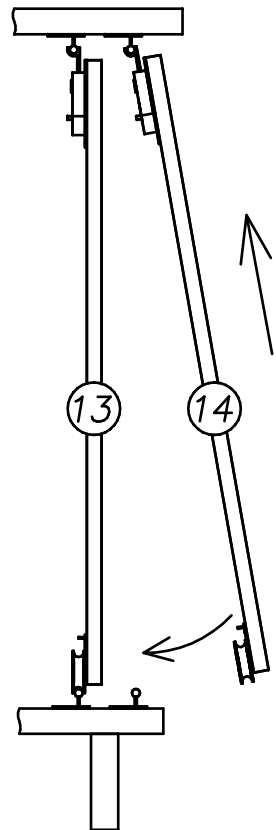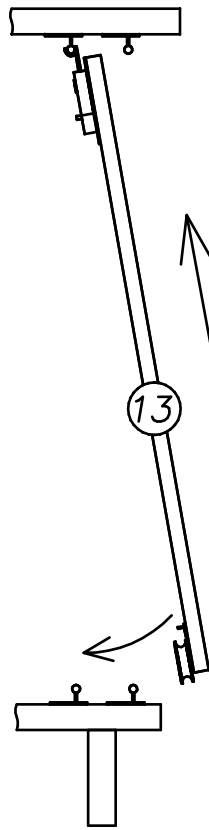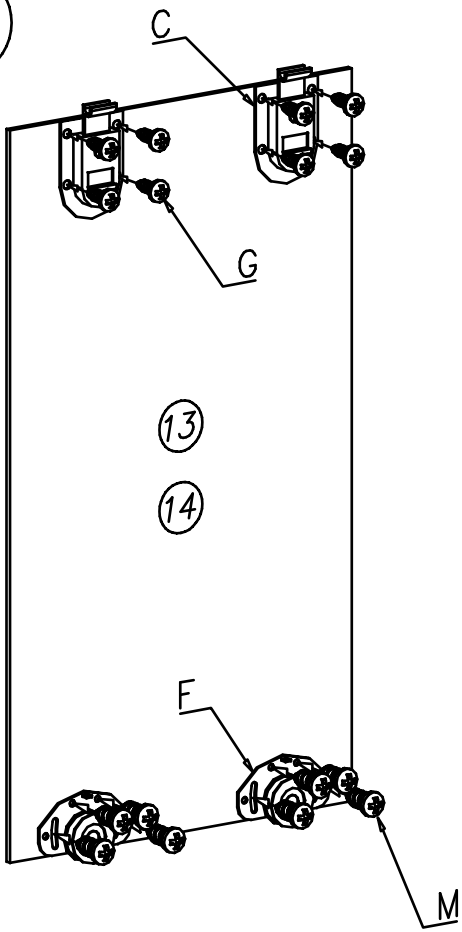

5

